
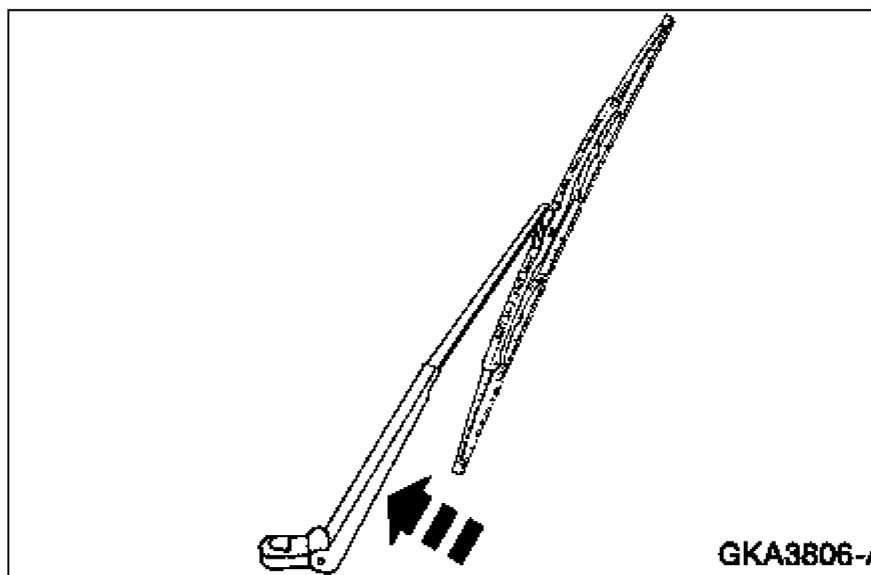


Mounting Arm and Pivot Shaft — Rear

Removal

 **CAUTION:** Use a shop towel or similar device to protect the vehicle finish when performing the procedure.

1. Raise the wiper arm into the replacement position.



2. Remove the wiper arm.
 1. Release the clip at the base of the pivot arm.
 2. Remove the wiper arm from the pivot shaft.

