


Features

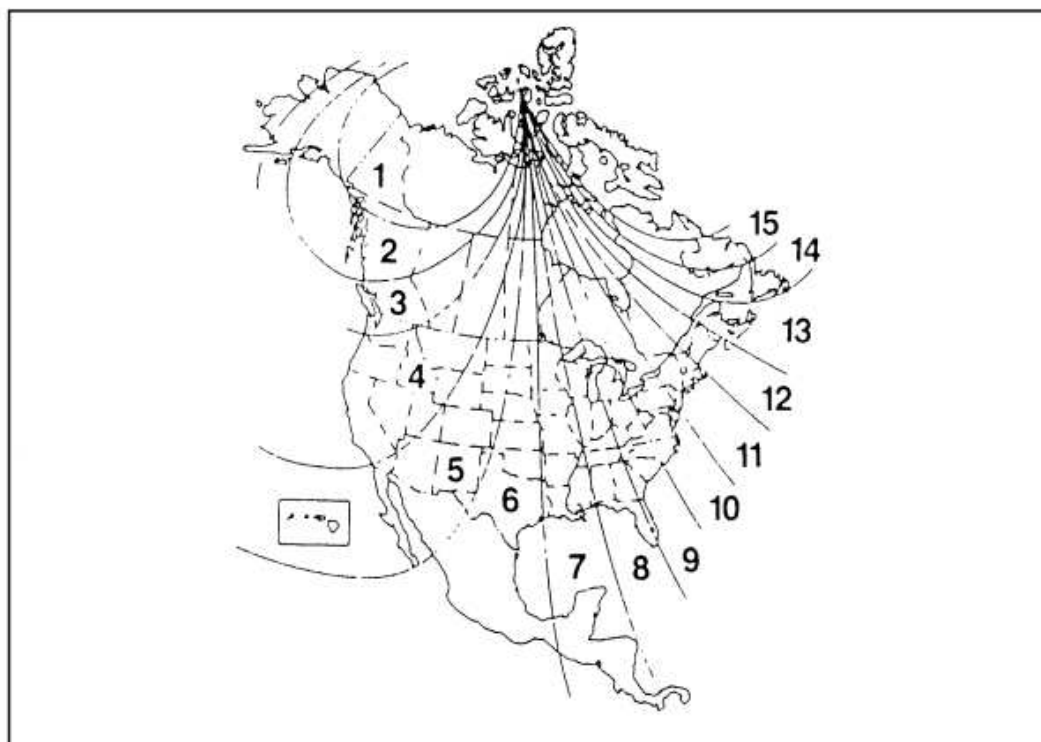

Zone map

2. Press and hold the "MODE" button until the "VAR" indicator appears in the display (approximately 4 seconds).
3. Release the "MODE" button. The display will now show the current zone number that is stored in the compass.
4. Press the "MODE" button repeatedly (or press and hold in) until the desired zone number appears in the display (once it reaches 15, the next press of the button will set it to 1).
5. Release the "MODE" button when the desired zone number is displayed.

After approximately three seconds the display will flash all segments and then return to normal operation. Zone is now updated.
