
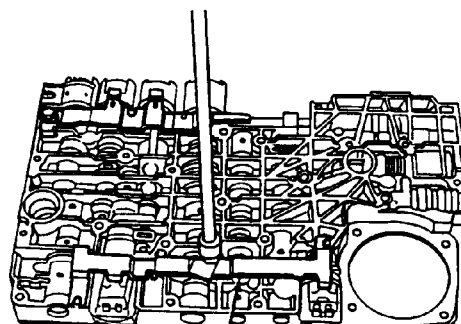


Item	Part Number	Description
1	7F037	Torque Converter Clutch Solenoid Assembly
2	7G484	Shift Solenoid 4 Assembly
3	7G484	Shift Solenoid 2 Assembly
4	7H144	EPC Solenoid Assembly
5	7G484	Shift Solenoid 1 Assembly
6	7G484	Shift Solenoid 3 Assembly

CAUTION: SS3 may pop out of its bore. This may damage the solenoid.

Use a 10mm socket to remove the SS1 and SS3 solenoid clamp screws. Remove the solenoid clamp and the solenoids.

Main Control Body Check Ball Location

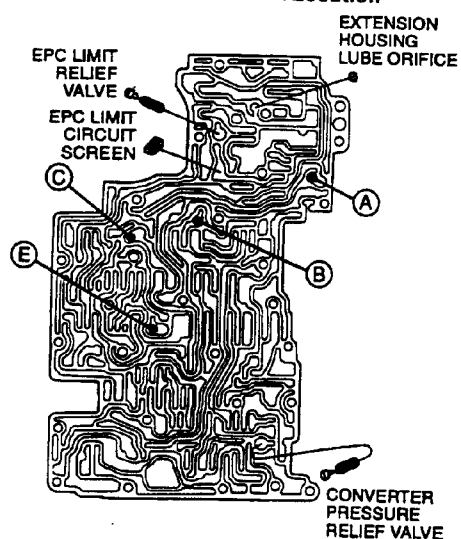

SS1 AND SS3
SOLENOID CLAMPS

NOTE: The TCC solenoid may pop out of its bore.

The converter modulator valve may come out after the TCC solenoid has been removed. This may damage the solenoid or converter modulator valve.

Remove the TCC, SS4, SS2 and EPC solenoid clamp screw.

TCC, SS4, SS2 AND EPC
SOLENOID BRACKET
7L491

